



# Verizon MHS900L Hotspot instructions

## Components

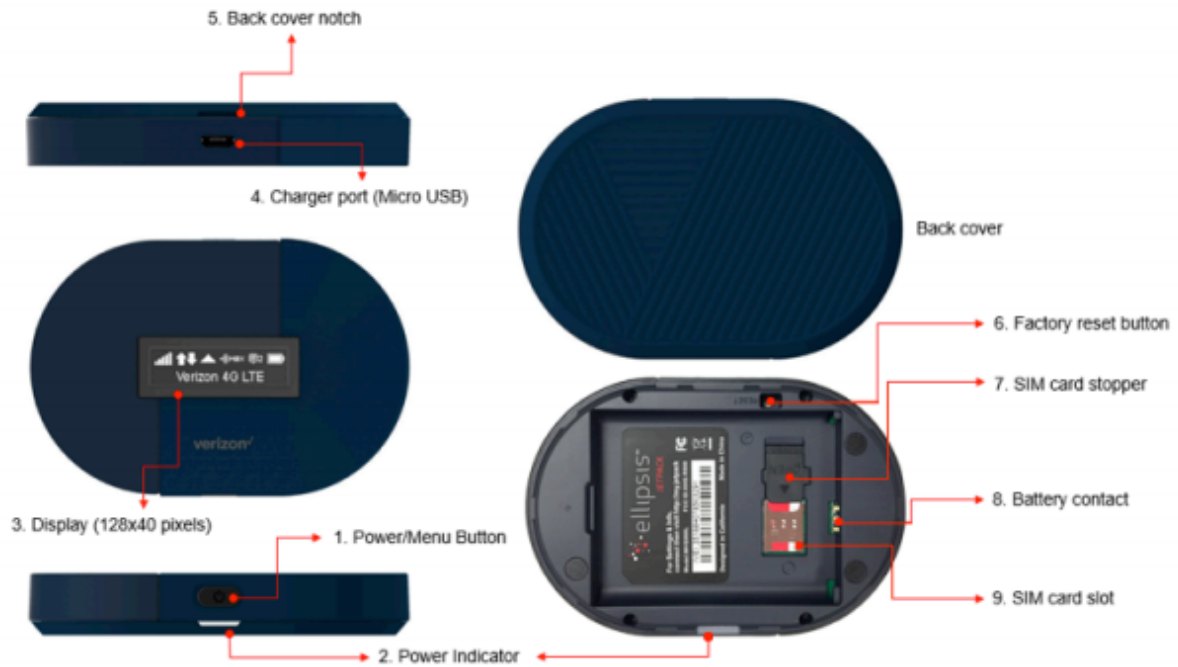




1. **Power/Menu Button** – Turn on/off the Jetpack. Shows the Jetpack menu and information



### Operation Status

	Operations	Actions
	Turn On	Press and hold the Power button for 2 seconds.
	Turn Off	Press and hold the Power button until "Goodbye" message appears.
	Display Wake-Up	When the display is off (sleep mode), the first quick press of the Power button wakes up the display.
	Info Display	When the display is on, each time the Power button is pressed quickly, the following information displays. Data Usage > Wi-Fi Name > Password > Web Admin URL guide > Home

### Charging Indicator Light

	Colors	Charging Status
	Off	The Jetpack is not connected to a charger.
	Red	The Jetpack is connected to a charger and is currently charging.
	Green	The Jetpack is connected to a charger and the battery is fully charged.

## 2. Power Indicator

	Colors	Charging Status
	Off	The Jetpack is off.
	White/Blinking	The Jetpack is on.


3. **Display** – Provides connection and battery status, network signal strength, roaming status, and the number of users connected with Wi-Fi.
4. **Charger Port** – The USB charger connects here.
5. **Back Cover Notch** –Lift the notch to open the back cover.
6. **Factory Reset Button** –Use one end of a small, unfolded paperclip to gently press and hold the reset button in the hole until the factory reset message displays.
7. **SIM Card Stopper** –Lift the stopper to insert or replace the SIM card.
8. **Battery contact** – Insert the battery with “UP” mark facing up to align battery contacts.
9. **SIM Card Slot** – The SIM card installation slot




## Battery Management

---

Your Jetpack is equipped with a replaceable rechargeable battery. It will work from its charged battery alone, or when the device is plugged into a power source.

**Note:** Please do not attempt to open or disassemble your Jetpack and the battery pack. Doing so may cause damage that voids your warranty.

Charge the battery by plugging in the charger provided together with your Jetpack. While the battery is charging, the battery charging icon  displays, and the power button illuminates red

. When the battery is charged, the battery icon is solid , the power button illuminates green .

---

**IMPORTANT!** Please use only an approved charger to charge your Jetpack. Improper handling of the charging port, as well as the use of an incompatible charger, may cause damage to your device and void the warranty.

---

## Charging the Battery

---

Before using your Jetpack, ensure that the battery is fully charged. Be sure to use the charger that came with your Jetpack.



 
---

**NOTE:** Your Jetpack is equipped with a replaceable rechargeable battery. When handling the battery or SIM card, please make sure the device is not connected to any power sources. Do not use any tools, sharp objects or any utensils when dealing with the battery. Doing so may cause damage that voids your warranty.

---

- It normally takes at least 3~5 hours, depending your power sources and device status to fully charge the battery.
- The battery discharges faster as additional devices connect with your Jetpack.
- Battery life depends on the network, signal strength, temperature, features, and active connection time.
- When charging, keep your Jetpack near room temperature.
- Never leave the Jetpack in an unattended vehicle due to uncontrolled temperatures that may be outside the desired temperatures for this Jetpack.
- It is normal for batteries to gradually wear down and require longer charging time.

# Device Display



## Display Icon

ICON	DESCRIPTION
 Network Signal Strength	Shows network signal strength. 
 Activity Indicator	Appears when data is being transferred between the mobile network and your Jetpack. 
 Connected Devices	Shows the number of connected devices. When the Jetpack can't support any more devices, MAX is shown. 
 Roaming Indicator	Appears when your Jetpack is roaming.
 Messages	Appears when you have unread text messages. 
 Battery Charge Indicator	Shows the battery charge status. 
 Charging	Appears when battery is charging.
 SIM Indicator	Appears when your Jetpack needs to notify SIM status. 

## Power On

Press and hold the Power/Menu button for 2 seconds.

## Power Off


Press and hold the Power/Menu button until "Goodbye" message displays.


**NOTE:** Your Jetpack is normally ready to use within one minute of powering on. However, depending on network signal strength, it is also normal for the device to take longer to connect to the wireless network.

# Connecting to Your Jetpack

## Wi-Fi Name (SSID) and Password

Your default Wi-Fi Name (SSID) and Password can be found on your Jetpack display upon initial power up.

You can also find your Wi-Fi Name and Password any time you need. Just press the power/menu button (  ) shortly when the display is on.

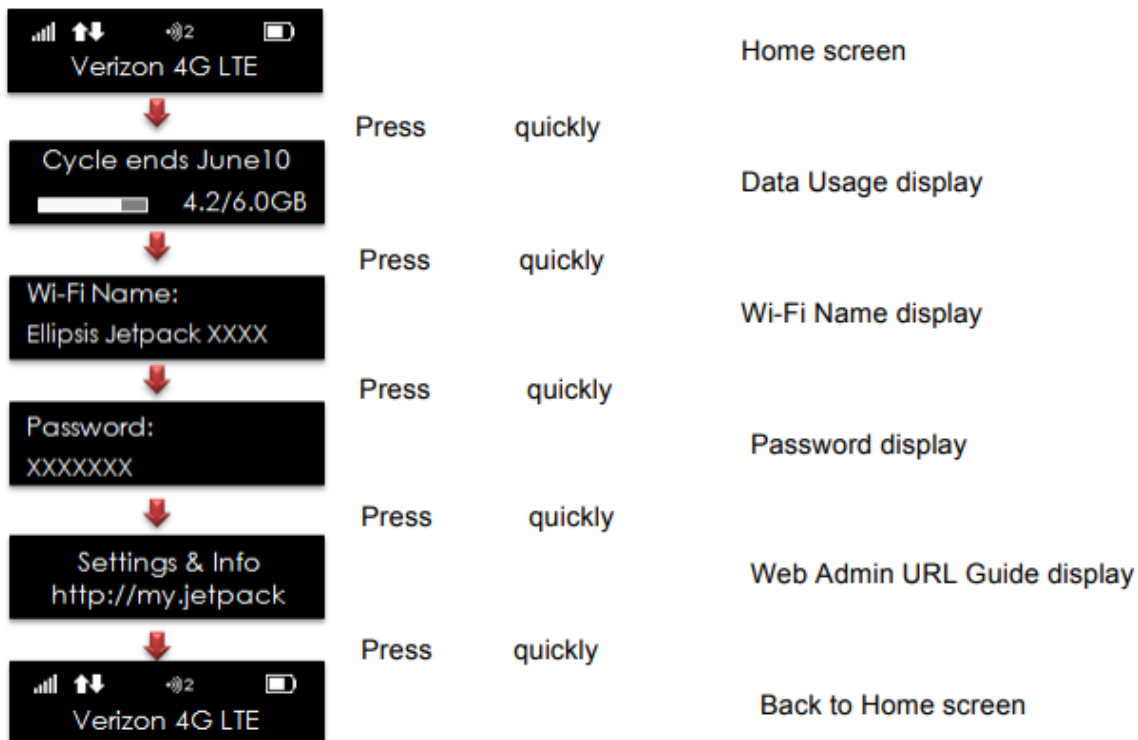

## Connecting to the Internet

- 1 Open the Wi-Fi application or controls on your laptop or Wi-Fi capable device that you want to connect to your Jetpack, and find your Jetpack's Wi-Fi name "Ellipsis Jetpack xxxx".
- 2 Click **Connect** and enter the Password when prompted.

